

BRIO®

Battery Powered Engine

Battery-operated play functions:

Press down the drive/stop button to make the engine go forward. Press again and the engine will stop.

Note! The engine needs to be driving in the forward direction when driving up an ascending track.

Please visit our website at brio.net for more information on how to care for your prized BRIO toy.

Keep in mind that:

- For the best play experience, always play with the engine on clean tracks.
 - The toy is intended for indoor play only.
 - The child's hair can easily get caught in moving parts.
 - The toy is not water-resistant and shall not be washed in a dishwasher as well as come into direct contact with water. Wipe off the toy with a clean dry cloth to remove any foreign materials.
 - The toy shall not be disassembled for safety reasons.
 - The plastic in the toy can fade over time.
- Avoid strong sunlight and other heat sources.

Inserting and replacing the Battery:

This engine is powered by 1xAA 1.5V battery. Use a screwdriver to open the battery compartment cover (see illustration). Always position new battery as shown (+/-). Close the cover and tighten the screw.

Important:

- Die Batterien sollten nur von Erwachsenen eingesetzt und ausgewechselt werden.
- Only adults should install and replace batteries.
- Different types of batteries or new and used batteries are not to be mixed.
- Only recommended batteries of the same or equivalent type as recommended (1.5V) are to be used.
- Batteries are not to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Always remove batteries if the toy is not to be used for some time.
- Protect the toy from water or dampness.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before being charged.
- Used batteries and electrical components must be disposed of at an approved collection point.
- Electrical components or batteries must not be thrown with household waste.

Please retain for future reference!



BRIO AB, Box 305, SE-201 23 Malmö, Sweden. Tel: +46 40 619 40 00.

© 2010 BRIO AB/3215-896 I

EN

BRIO®

Batterielok

Fahr-/Stopptaste



DE

BRIO®

Batterielok

Fahr-/Stopptaste

 


FR

BRIO®

Locomotive à piles

Bouton lecture/stop



ES

BRIO®

Locomotora a pilas

Botón de unidad/detención

 


PT

BRIO®

Locomotiva a pilhas

Botão de drive/stop



IT

BRIO®

Locomotiva na batéria

Tlačidlo jazdy/zastavenia

 


SK

BRIO®

Battery Engine

Tlačidlo jazdy/zastavenia

 


FR

BRIO®

Battery Engine

Tlačidlo jazdy/zastavenia



NOTICE

BRIO®

Battery Engine

Tlačidlo jazdy/zastavenia



FR

NOTICE



